9. Disassembly / Assembly

©Nokia Corporation

©Nokia Corporation

Contents

Page No
Disassembly of NSD-5FX 5
Remove battery 5
Remove the A-Cover 5

©Nokia Corporation

©Nokia Corporation

Disassembly of NSD-5FX

Note: Some form of ESD protection should be used when handling the printed wiring board and other electronic components. In addition, gloves are required when handling the components.

Remove battery

Press the button at the bottom of the phone.

Slide the cover downwards and the cover will be released.

Lift the battery first from the bottom end.

Remove the battery.

©Nokia Corporation

Remove the A-Cover

Press the button on top of the phone..

Pull the A-cover apart.

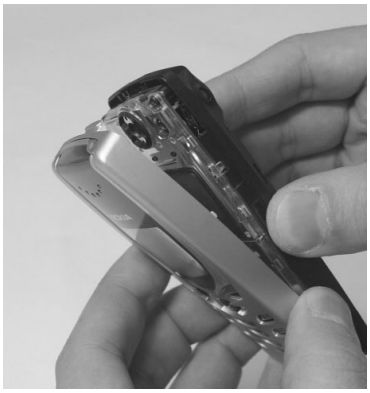

To remove the PWB from the housing, remove the seven screws.

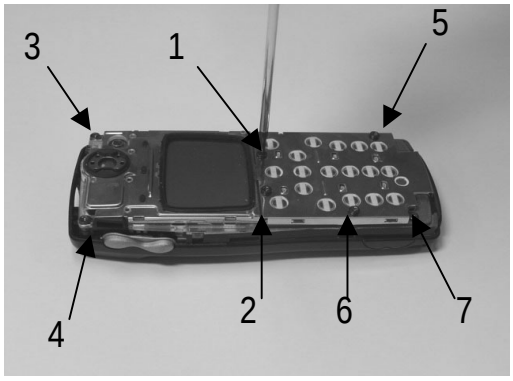

©Nokia Corporation

Remove the UI module from the PWB.

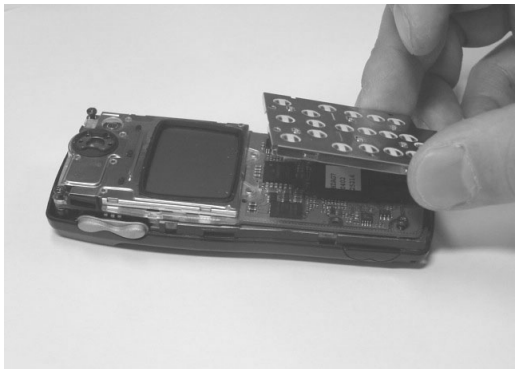

Remove the PWB.

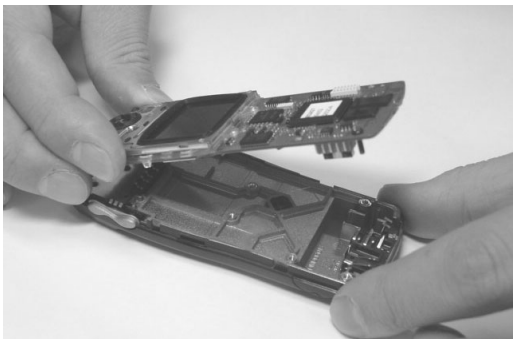

Parts can be separated

When taking the PWB and LCD module apart, remember the fixings on both sides of the LCD.

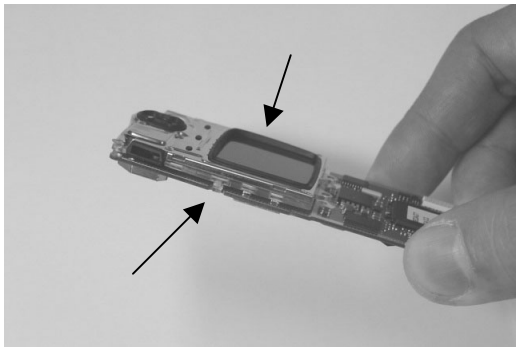

©Nokia Corporation

Remove the volume switch and the key from the housing.

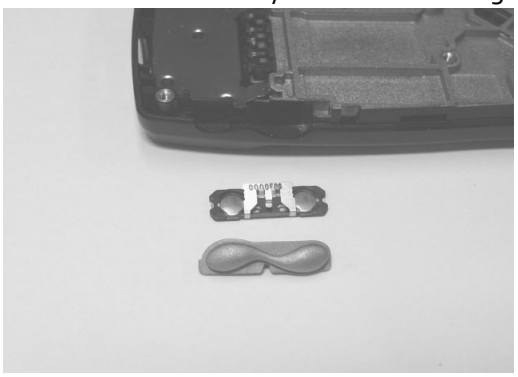

Remove the battery connector from its housing, using the SRT-3 tool.

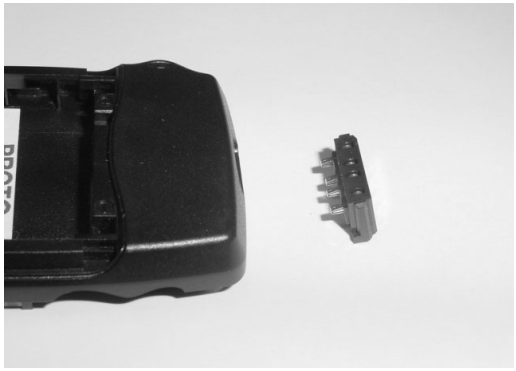

Remove the antenna by releasing the snap fixing on both sides of the phone.

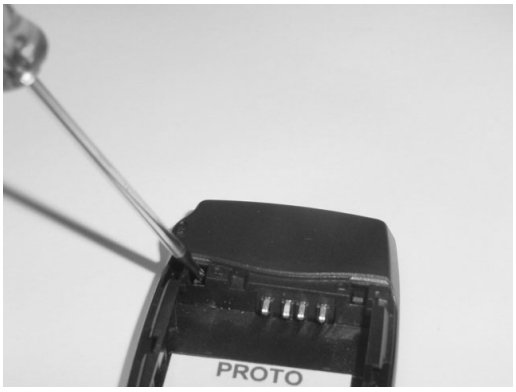

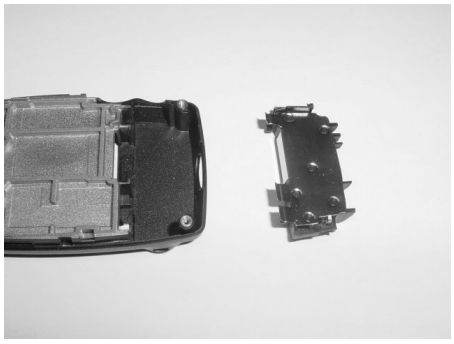

©Nokia Corporation

Main parts of the disassembled phone are illustrated below:

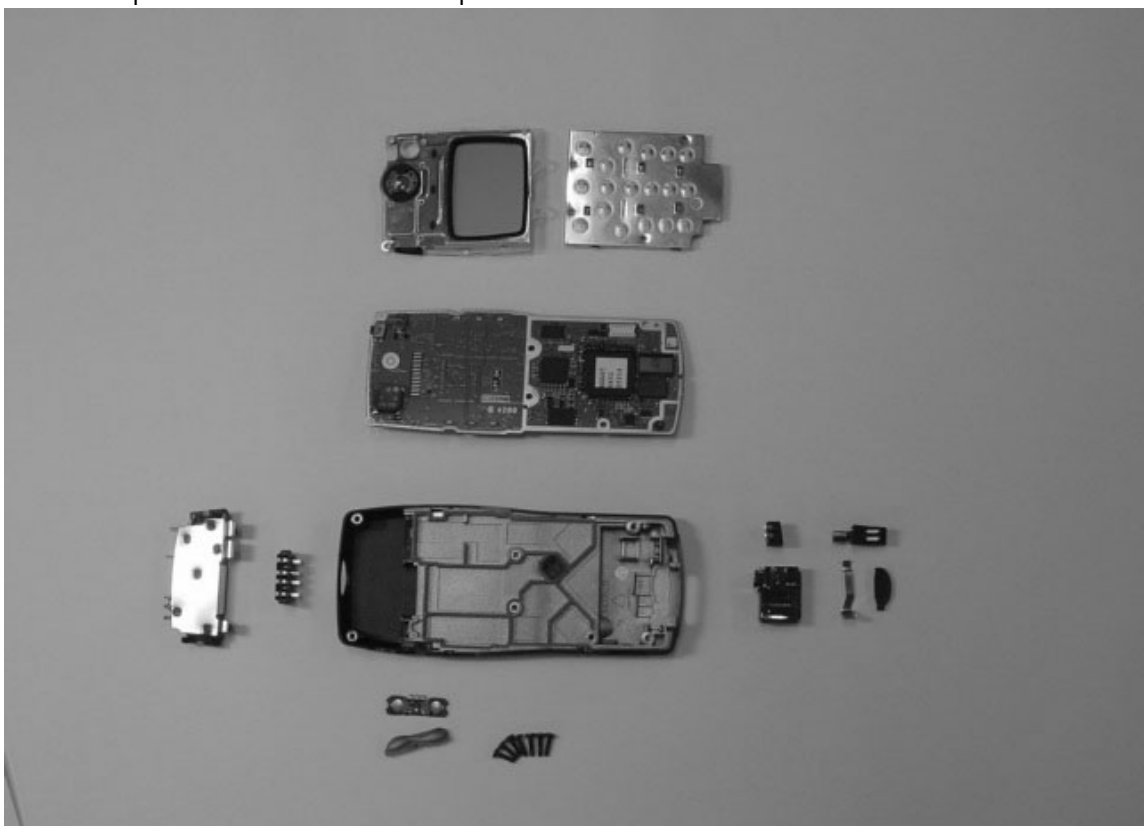

©Nokia Corporation

©Nokia Corporation